

**DART**

DESIGN KE	DRAWN BY PH	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
CHECKED [Signature]	APPROVED [Signature]	DRAWING NO. D2310	REV. D SHEET 1 OF 2
DATE 05.11.14		TITLE HIGH SHORT STEP ASSEMBLY	SCALE NTS
A	94.11.10	NEW ISSUE	
B	97.05.22	END CAPS CHANGED	
C	97.07.23	ADDED BUSHING AND FACING INFO	
D	05.11.14	UPDATE FINISHING NOTE	

**D2310 HIGH SHORT STEP ASSEMBLY PARTS LIST**



Part No.	Description	QTY
D2310	High Short Step Assembly	X
D2244-62.0	STEP EXTRUSION*	1
D2275	BUSHING	1
D2582	STEP LEG ASSEMBLY	1
D2673-34	STEP END PLATE	2
MS20600AD4W3	Rivets	16

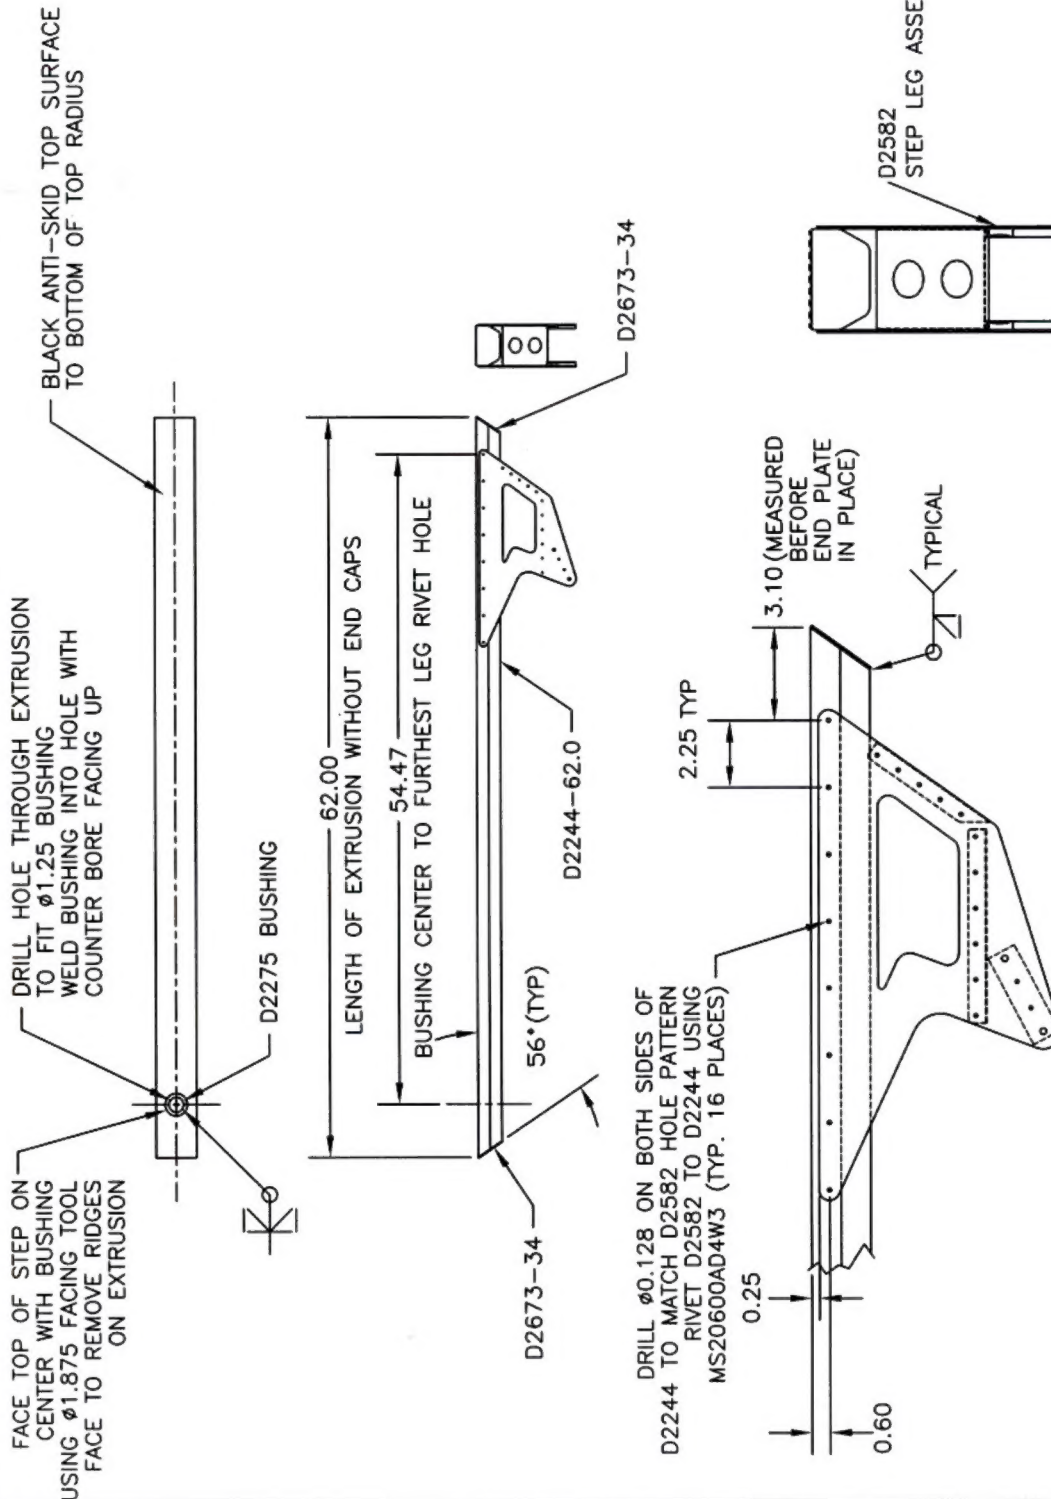
\*cut per drawing

**RELEASED**  
05.11.28 [Signature]**Copyright © 1994 by DART AEROSPACE LTD**

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

**DART**


DESIGN KE	DRAWN BY PH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED 	APPROVED 	DRAWING NO. D2310	REV. D SHEET 2 OF 2
DATE 05.11.14	TITLE HIGH SHORT STEP ASSEMBLY		SCALE NTS



## STEP LEG DETAIL

### D2310 HIGH SHORT STEP ASSEMBLY

- 1) MAKE FROM D2244 STEP EXTRUSION
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1  
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3  
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) ALL DIMENSIONS ARE IN INCHES
- 5) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

**RELEASED**  
05.11.28 

Copyright © 1994 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.